

Testing and adjusting value


Distance "a" between choke housing and driver (197)

approx. 1.0 mm

Checking, correcting

- 1 Check whether driver (196 and 197) is at right angle in relation to choke housing and rebend lever, if required.


Choke housing version 1

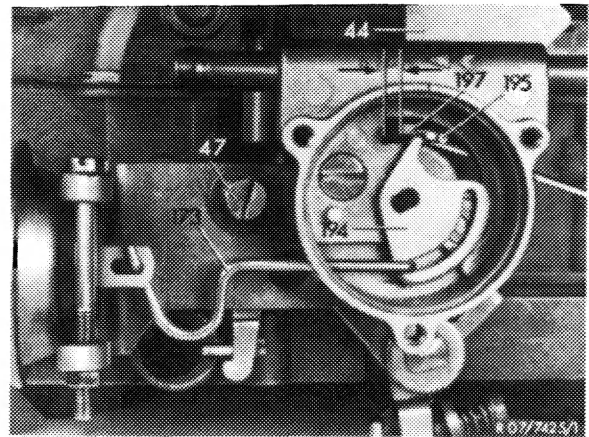

- 2 Operate throttle valve lever by half. Push driver (196 or 194) to the left up to stop.

- 3 Check whether choke valve is **closed free of play** and whether the distance "a" between driver (197) and choke housing amounts to approx. 1.0 mm.

Choke housing version 2

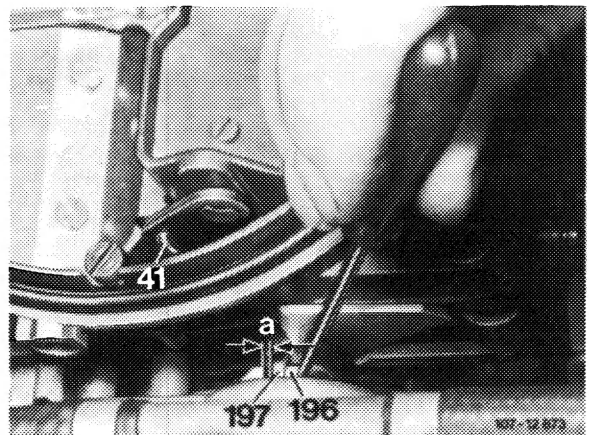

- 4 Disconnect choke rod (41) if required and bend as needed.

Attention!

To prevent distortion of driver (196), support choke rod.

